

# LED Display Manual

## Software installment

- 1.1. Copy all documents into your computer disc from the CD disc.
- 1.2. Find the document "USB driver" to install it.  
Click "XP .exe" if your computer system is XP;  
Click "VISTA-W7.exe" if your computer is VISTA or W7.
- 1.3. Connect your computer and the LED display with the USB cable that together with goods.  
If it's effective connection, we can check it by "My Computer" – "Device Manager" – "COM port"
- 1.4. Double click "LedConfig.exe" to open the software, which is green color icon. (You could send Desktop shortcut in order to find it easily next time.)  
Remarks: When desktop computers use for the software, you need to change (COM1) in "Communication control" in to Prolific USB-to-serial Com port (COM?)

## Detail instruction of software:

1. Select: select which message to send, you can select one to eight messages.
2. Type: text and image for choice.  
Text: write what message you want  
Image: apply BMP file images, and the pixel height should be 12 or 16 to match the display.
3. Contents: can write any messages by any language. Icon "A" is for font adjustment.
4. Time: for messages moving speed adjustment.
5. Action: for message moving direction or effect choice.
6. Insert: support Time & Date, LOGO, and it can appear at same time while displaying a message.
7. Flash: select it and message will keep flash.
8. Border: select it and a border appear around the message.
9. Preview: preview for the message or image that the cursor being located
10. LOGO: selecting Insert bar, you can up load LOGO in text or image that within 16\*64pixel.
11. Timing: up date time that base on your computer time.
12. Send or Download: click Send for LED display being connected, Download for infrared way.
13. Export: for message up date by TF card
14. Communication control: choose the right one Prolific USB-to-serial Com port (COM?).

## Menu discretion:

1. File: for open new, save, save as or exit.
2. View: for choose whether need toolbar or statusbar..
3. Language: software interface language changed.
4. Brightness: 5 degree brightness available
5. Size: According to the height of LED display, 12 or 16 for choice.
6. Rotate: 0° , 90° , 180° , 270° for choice
7. Help: If you have question during the operation, please click Help.

Remarks: More information please read the manual together with goods.